



CHAIN GUARD ASSEMBLY INSTRUCTION

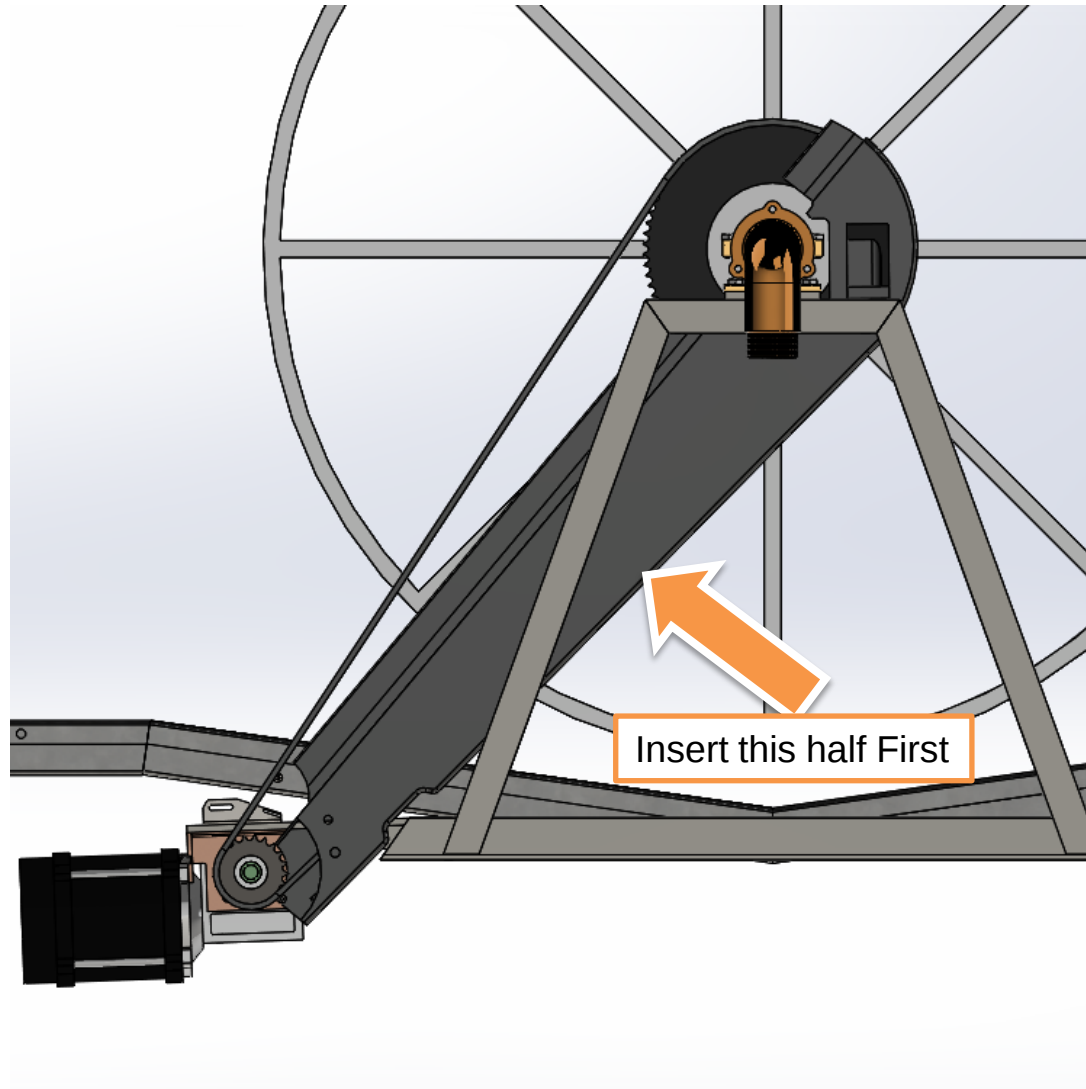


Insert this half before inserting the other half (ref. Page 2)

Insert after bottom guard is in place

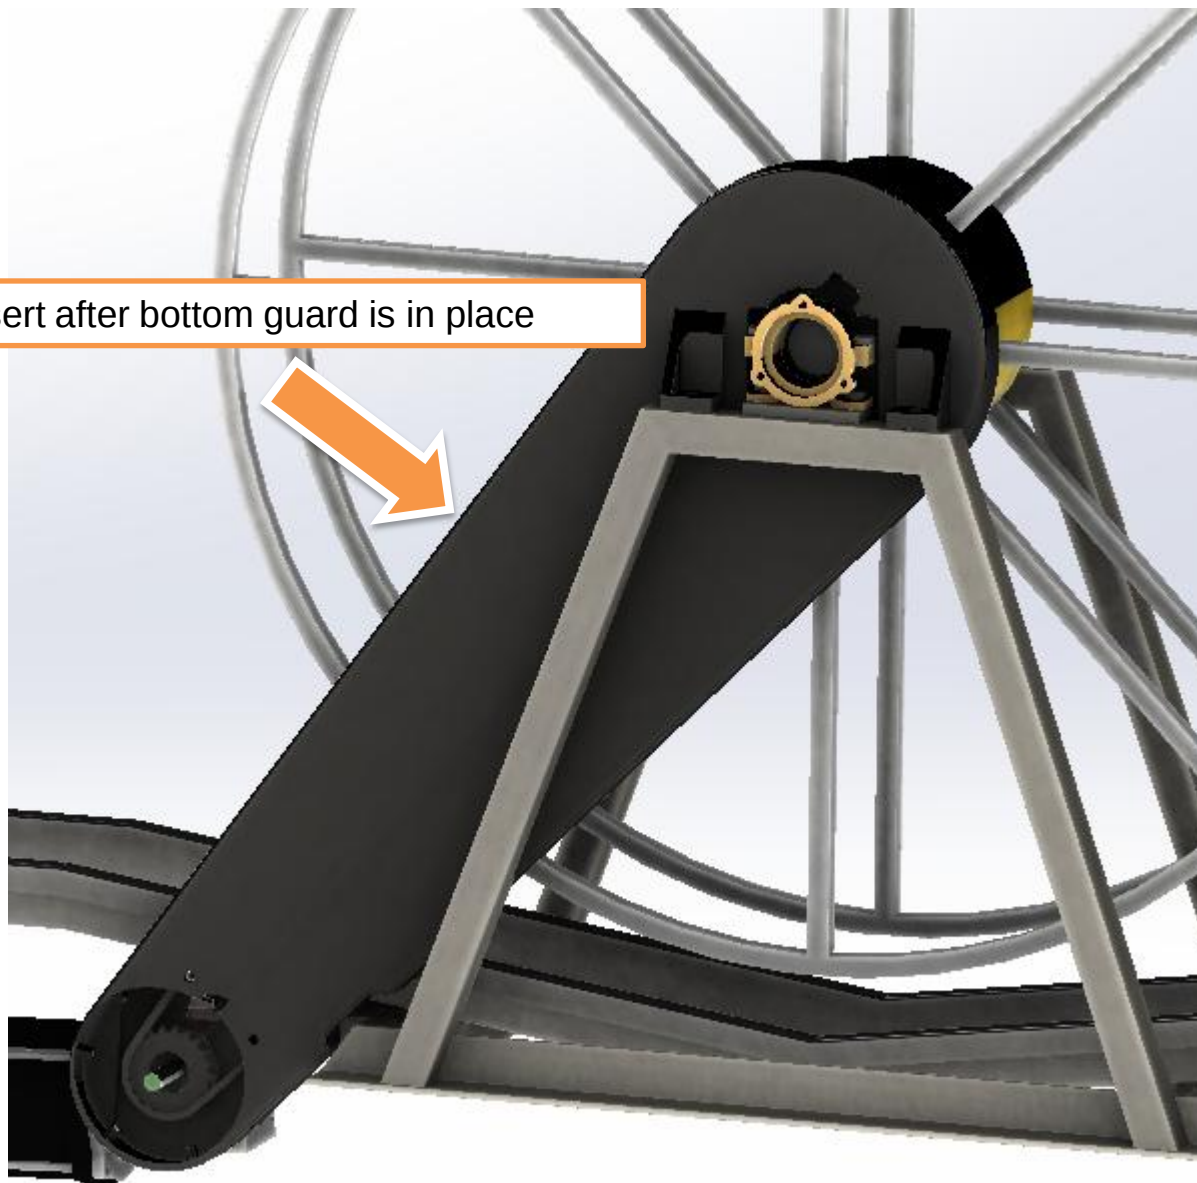


CHAIN GUARD ASSEMBLY INSTRUCTION

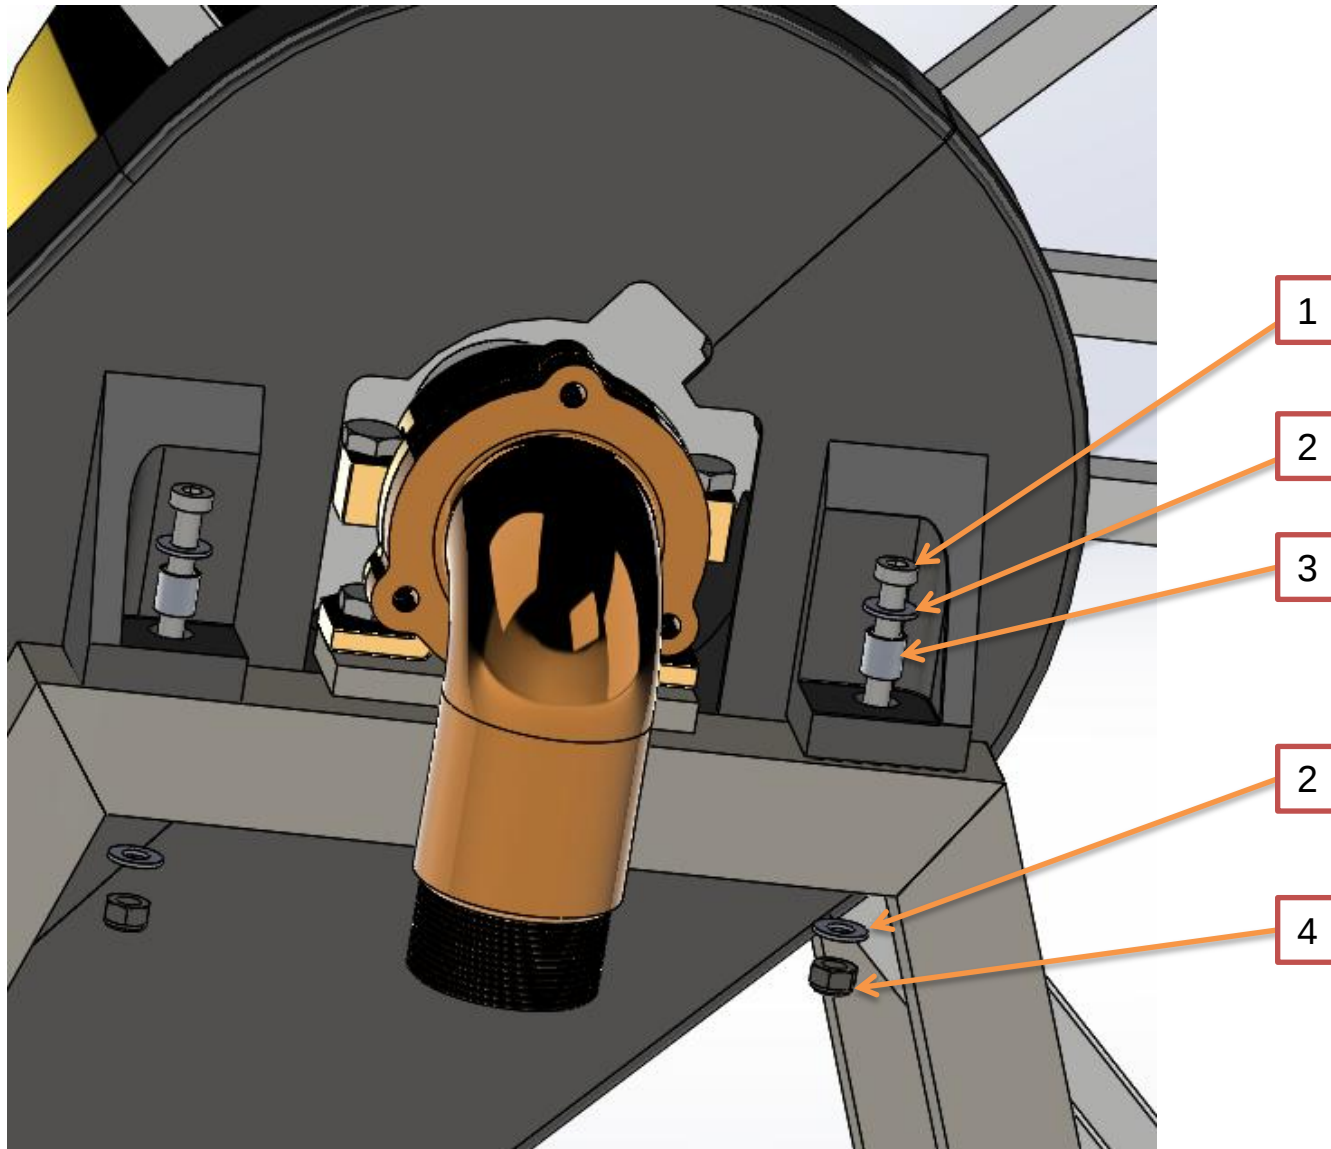


Bolt Guard in place as shown in picture


CHAIN GUARD ASSEMBLY INSTRUCTION

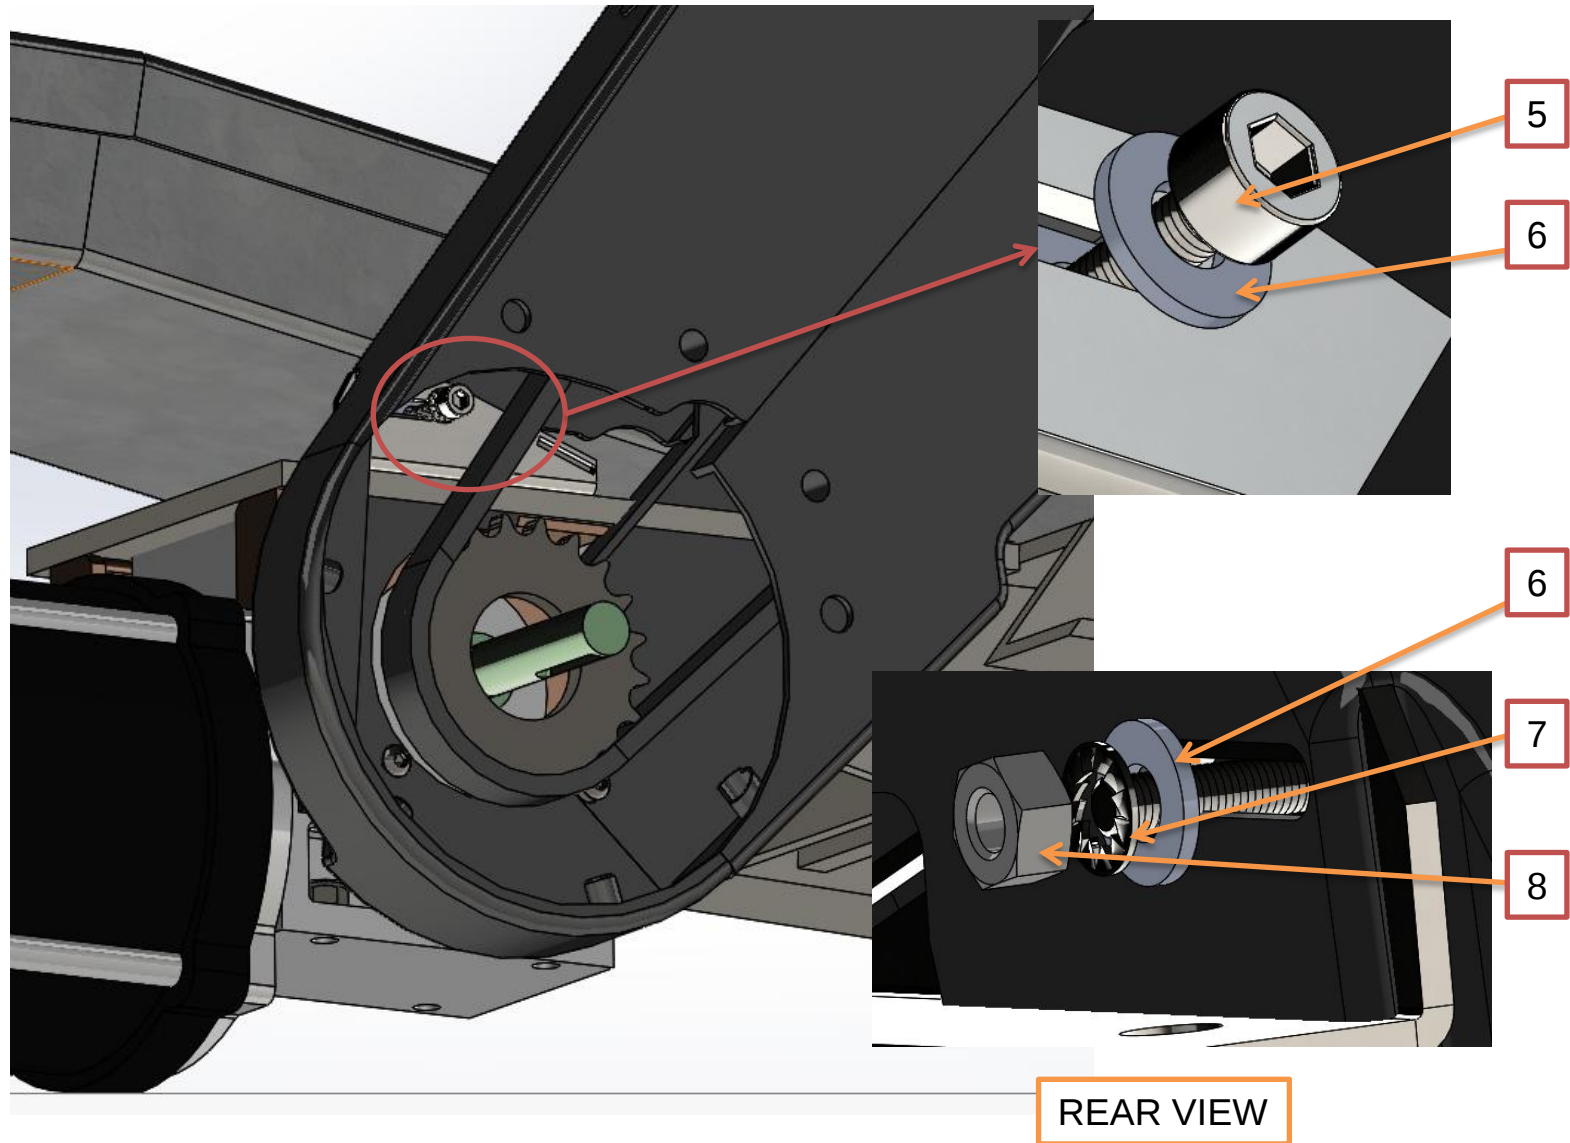

CHAIN GUARD ASSEMBLY INSTRUCTION

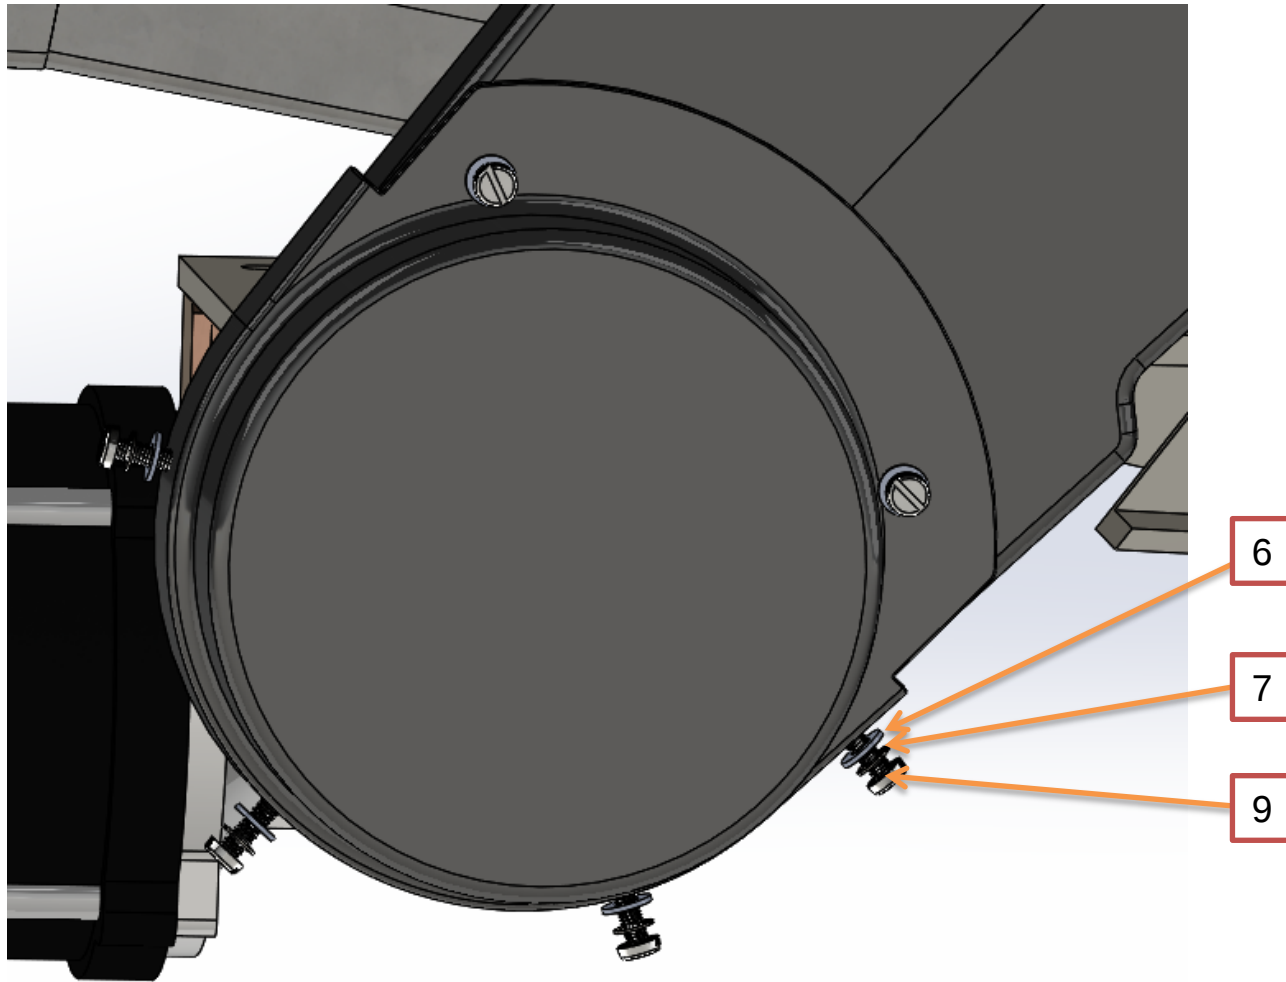

Assemble Cover by bolting on the guard as shown

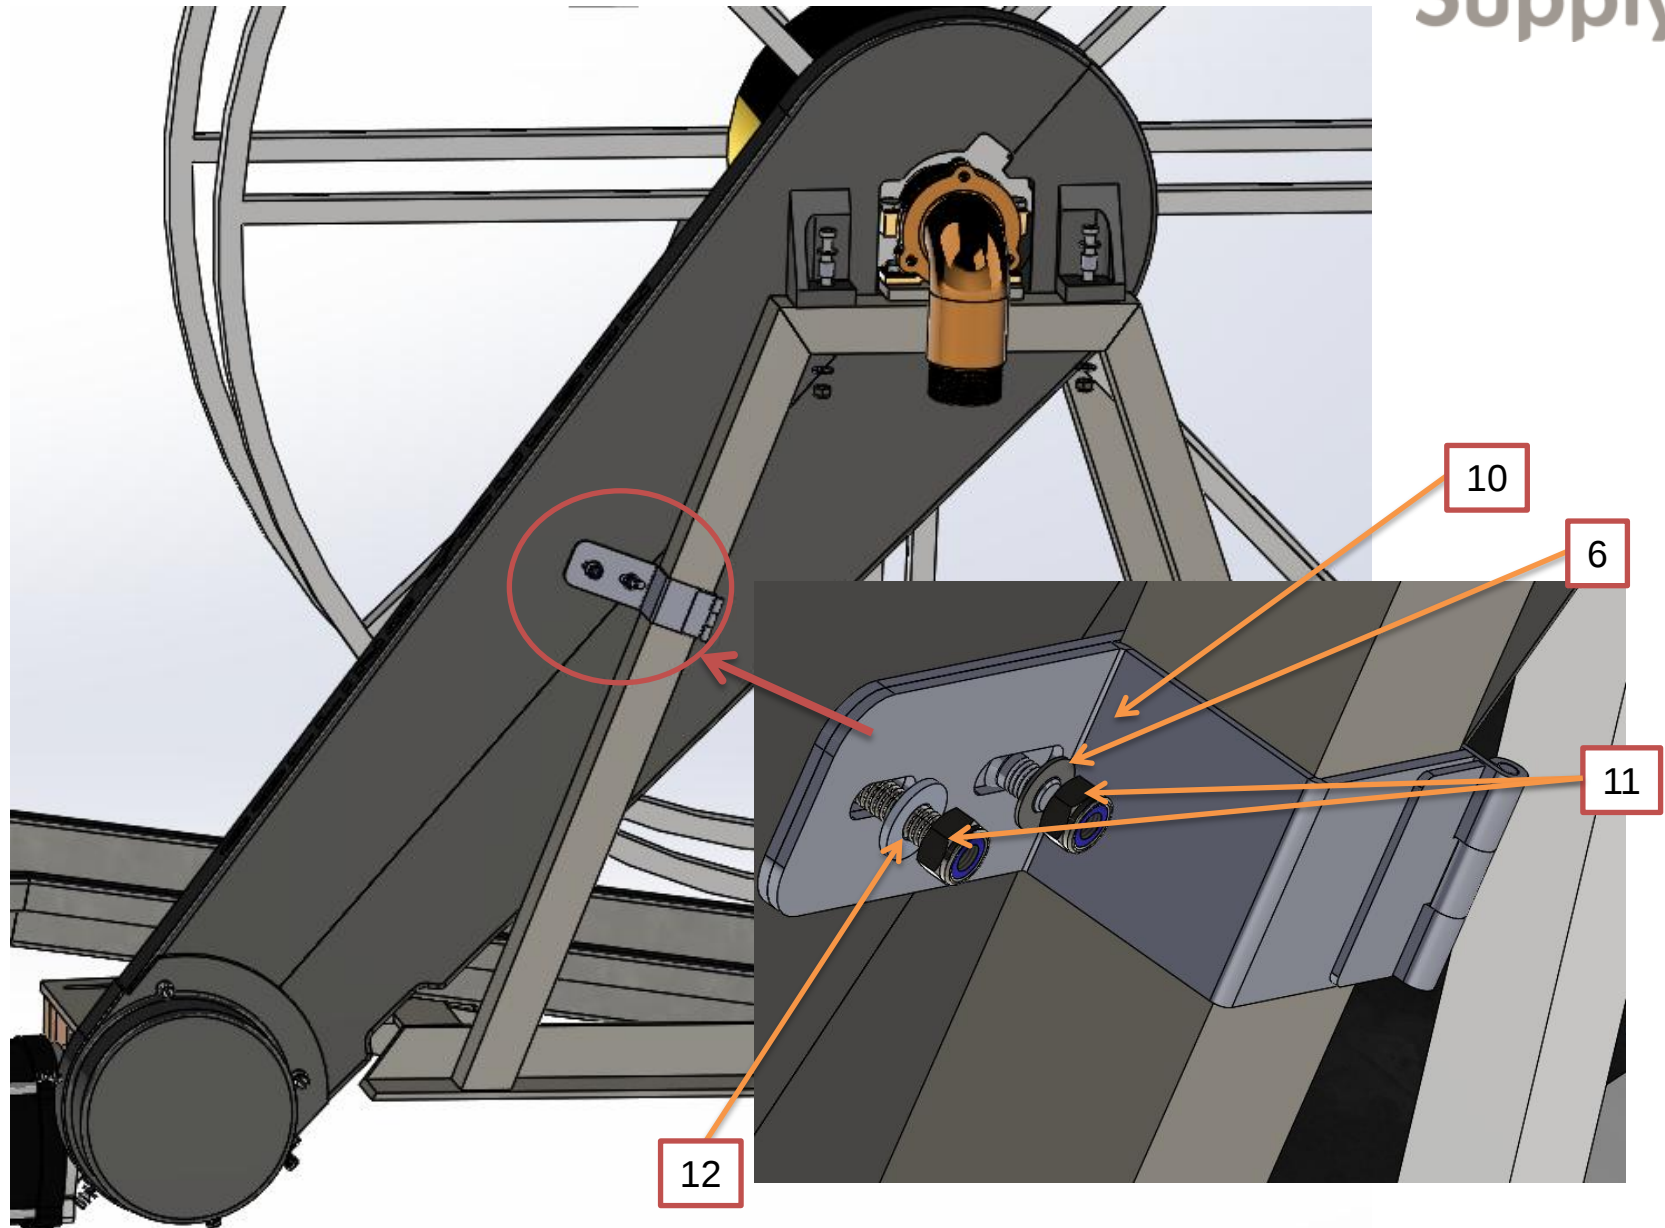

Using bracket (item 10), fasten the guard onto the A Frame

CHAIN GUARD ASSEMBLY INSTRUCTION

S/N	P/N	DESCRIPTION	QTY
1	FPB.226	M8 x 70mm Cap Hd. Bolt	2
2	FPW.338	3/8" Dia. Plain Washer	4
3	7746.06.A	Chain Guard Bracket Spacer	2
4	FPN.246	M8 Hex. Full Nut	2
5	FPB.108	M6 x 20mm SKT Hd Cap Screw	1
6	FPW.141	6mm Dia. Mudguard Washer	8
7	FPW.137	M6 Int. SHKPRF Washer	7
8	FPN.140	M6 Hex Full Nut	1
9	FPB.103	M6 x 16mm Rd. Hd. Set Screw	6
10	7746.27.MQ	Plastic Chain Guard Bracket Assy.	1
11	S210M	M6 Nut Self Locking SS/A4	2
12	R2125M	1/4" Washer 3/4" OD x 16swg	2